



C/N: 1031000495

Programmable Logic Controller 설치 가이드
XGT Cnet XGL-C22B, CH2B, C42B



본 설치 가이드는 PLC제어를 위해 간략한 동작 설명을 제공합니다. 제품을 사용하기 전에 안전을 위한 주의 사항 등을 반드시 읽고 정확하게 사용하여 주십시오.

1 안전을 위한 주의사항

■ 경고/주의 표기의 의미

	경고	취급을 잘못할 경우 사용자가 사망 또는 중상을 입을 위험이 예상되는 경우
	주의	취급을 잘못할 경우 사용자가 상해를 입거나 또는 물적 손해만 발생하는 위험이 예상되는 경우

⚠ 경고

- 전원이 인가된 상태에서 단자대를 만지지 마십시오.
- 제품 내부의 금속성 이물질이 유입되지 않도록 하여 주십시오.
- 배터리는 충전, 분해, 가열, 쇼트, 솔더링 등을 하지 마십시오.

⚠ 주의

- 제품의 정격전압과 단자 배열을 확인한 후 정확하게 배선하여 주십시오.
- 배선 시 단자의 나사를 규정 토크로 단단하게 조여 주십시오.
- 가연성 물질이 있는 주변에 설치하지 마십시오.
- 제품에 직접 진동이 인가되지 않도록 하십시오.
- 전문 서비스원 외에는 제품을 분해, 수리 또는 개조하지 마십시오.
- 사용설명서와 데이터시트에 명기된 일반규격의 조건에서 사용해 주십시오.
- 출력단에 연결하는 부하는 규정된 정격 이내의 것을 사용하십시오.
- 제품과 배터리를 폐기할 경우 산업 폐기물로 처리하여 주십시오.
- 입출력 신호 또는 통신선은 고압선이나 동력선과는 최소 100mm 이상 떨어 뜨려 배선하십시오.

■ 설치 시 아래 환경 조건을 준수하여 주시기 바랍니다.

2 사용 환경에 대하여

No	항목	규격	관련규격		
1	사용온도	0℃ ~ 55℃	-		
2	보관온도	-25℃ ~ 70℃	-		
3	사용습도	5~95%RH, 이슬이 맺히지 않을 것	-		
4	보관습도	5~95%RH, 이슬이 맺히지 않을 것	-		
5	내진동	단속적인 진동이 있는 경우		-	
		주파수	가속도	진폭	X, Y, Z 각 방향 10회
		5s<f<8.4Hz	-	3.5mm	
		8.4s<f<150Hz	9.8ms ² (1g)	-	
		연속적인 진동이 있는 경우		-	
		주파수	가속도	진폭	IEC 61131-2
5s<f<8.4Hz	-	1.75mm			
		8.4s<f<150Hz	4.9ms ² (0.5g)	-	

3 사용 가능한 버전

■ 시스템 구성 시 아래 버전을 사용하여 정상적인 동작이 가능합니다.

- XGI CPU : V4.05 이상
- XGK CPU : V4.5 이상
- XGR CPU : V2.6 이상
- XG5000 Software : V4.07 이상

4 부속품 및 케이블 규격의 확인

■ 모듈 내에 장착되어 있는 RS-422/485 커넥터를 확인하여 주십시오. (XGL-CH2B/C42B)


■ 사용 케이블은 통신 거리와 통신 속도를 고려하여 RS-422용 트위스트 페어 케이블을 사용하여야 합니다.

- 품명 : Low Capacitance LAN Interface Cable
- 형명 : LIREV-AMESB
- 규격 : 2P X 22AWG(D/0.254 TA)
- 제조원 : LS전선 또는 기타 동급 재질의 메이커
- 전기적 특성

항목	단위	특성	조건
도체저항	Ω/km	59 이하	상온(25℃)
내전압 (DC)	V/1min	500V에 1분간 견딤	공기중
절연저항	MΩ-km	1,000 이상	상온(25℃)
정전용량	Pf/M	45 이하	1kHz
특성 임피던스	Ω	120±12	10MHz

5 제품의 각 부 명칭 및 외형치수 (mm)

■ 제품의 전면부에 대한 설명입니다. 각 부의 명칭을 참조하여 시스템 운전 시 참조하시기 바랍니다. 자세한 설명은 사용설명서를 참조하십시오.

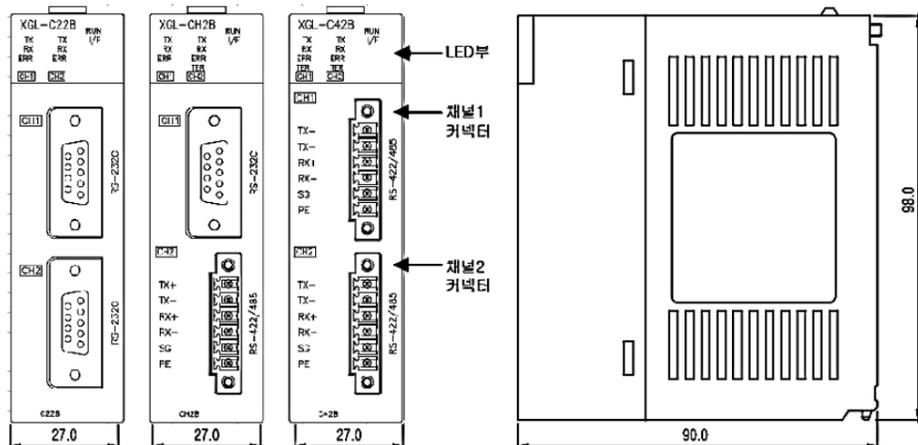

■ LED 표시 부 설명

명칭	표시	상태	내용
RUN	Cnet 동작 상태 표시	점등	정상 동작
		소등	Cnet 모듈 이상 동작
I/F	CPU와의 인터페이스 상태 표시	점등	CPU 모듈과 통신 중 이상 동작
		소등	통신 모듈 초기화 이상 동작
		점멸	정상 동작
TX	프레임 송신 중 표시	점등	프레임 송신 중
		소등	프레임 송신 대기
RX	프레임 수신 중 표시	점등	프레임 수신 중
		소등	프레임 수신 대기
ERR	프레임 에러 표시	점등	프레임 에러
		소등	정상 프레임
TER	RS-422/485 통신 포트 중단 저항 설정 표시	점등	종단 저항 설정 (XGL-CH2B/C42B)
		소등	종단 저항 해제 (XGL-CH2B/C42B)

6 제품의 장착 및 분리


■ 제품 설치 시 아래 순서에 따라 설치하여 주시기 바랍니다.

1) 모듈의 장착

- 모듈 아래 쪽의 고정용 돌기를 베이스의 모듈 고정용 홈에 삽입합니다.
- 모듈의 뒷부분을 밀어서 베이스에 고정 후 제품 뒷부분에 있는 고정용 나사를 이용하여 고정합니다.
- 모듈의 뒷부분을 당겨 베이스에 확실히 장착되었는지 확인합니다.

2) 모듈의 분리

- 모듈 위쪽의 고정용 나사를 돌려 베이스에서 분리합니다.
- 모듈의 고정용 홈을 누르면서 모듈의 하부를 축으로 모듈의 상부 쪽을 당깁니다.
- 모듈을 상부로 들어 올리면서 모듈의 고정용 돌기 부분을 모듈의 고정 홈에서 떼어냅니다.

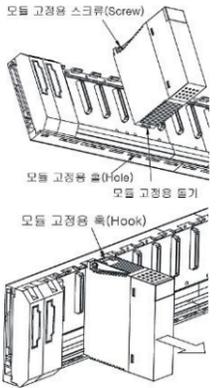

7 배선

■ 통신 배선

1) 모뎀 접속 시의 RS-232C 커넥터 접속 방법

Cnet(9-PIN)		신호 방향 (Cnet ↔ 외부기기)		모뎀 측(25-PIN)	
핀 번호	명 칭			명 칭	핀 번호
1	CD	←		CD	8
2	RXD	←		RXD	3
3	TXD		→	TXD	2
4	DTR		→	DTR	20
5	SG			SG	7
6	DSR	←		DSR	6
7	RTS		→	RTS	4
8	CTS	←		CTS	5

2) RS-422 커넥터 접속 방법

컴퓨터 링크 측		신호 방향 (Cnet ↔ 외부기기)		외부 통신기기	
핀 번호	명 칭				
1	TX+		→		RX+
2	TX-		→		RX-
3	RX+	←			TX+
4	RX-	←			TX-
5	SG				SG
6	PE				PE

3) RS-485 커넥터 접속 방법

컴퓨터 링크 측		신호 방향 (Cnet ↔ 외부기기)		외부 통신기기	
핀 번호	명 칭				
1	TX+		→		RX+
2	TX-		→		RX-
3	RX+	←			TX+
4	RX-	←			TX-
5	SG				SG
6	PE				PE

4) PE는 배선하지 않아도 무방합니다.

5) 이외의 상세 배선 방법은 사용설명서를 참고하시기 바랍니다.

8 보증 내용

■ 구입하신 제품의 보증 기간은 제조일로부터 36개월입니다.

■ 최초 고장 진단은 고객사에서 진행함을 원칙으로 합니다. 고객사에서 요청할 경우 당사에서 유상으로 지원 가능하며, 고장 원인이 당사에 있는 경우 무상 처리 됩니다.

■ 보증 외 범위

- 소모, 수명 부품(릴레이, 퓨즈, 전해 CAP, 배터리, LCD 등)의 교환
- 사용설명서에 명기된 이외의 부적당한 조건·환경·취급으로 발생한 경우
- 고장의 원인이 당사의 제품 이외의 것으로 발생한 경우
- 당사의 양해 없는 제품의 개조 등에 의한 고장
- 제품 본래의 사용 방법이 아닌 경우
- 당사에서 출하 시 과학·기술의 수준에서는 예상이 불가능한 사유에 의한 경우
- 화재, 이상 전압 등의 불가항력에 의한 외부 요인 및 천재지변에 의한 고장
- 기타 당사에 책임이 없는 경우

■ 제품 보증내용 관련 상세내용은 당사 홈페이지 내 사용설명서를 참조하시기 바랍니다.

■ 제품 성능 개선을 위해 설치가이드의 내용은 사전 예고 없이 변경될 수 있습니다.

LS ELECTRIC Co., Ltd. www.ls-electric.com 1031000495 V4.5 (2024.6)



한번 맺은 인연을
가장 소중히
여깁니다!

■ 서비스 대표 전화 (전국 어디서나)

1544-2080

■ 구입 문의

서울영업 TEL:(02)2034-4623~38
부산영업 TEL:(051)310-6855~60
대구영업 TEL:(053)603-7741~8
서부영업(광주) TEL:(062)510-1891~92
서부영업(대전) TEL:(042)820-4240~42



FAX:(02)2034-4057
FAX:(051)310-6851
FAX:(053)603-7788
FAX:(062)526-3262
FAX:(042)820-4298

■ 제조사(공장): 충남 천안시 동남구 목천읍 삼성4길 56 (우 31226)



This installation guide provides simple function information or PLC control. Please read carefully this data sheet and manuals before using products. Especially read precautions then handle the products properly.

1 Safety Precautions

Meaning of warning and caution label

	WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
	CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices

WARNING	
①	Do not contact the terminals while the power is applied.
②	Be sure there are no foreign metallic matters.
③	Do not manipulate the battery(charge, disassemble, hitting, short, soldering).
CAUTION	
①	Be sure to check the rated voltage and terminal arrangement before wiring
②	When wiring, tighten the screw of terminal block with the specified torque range
③	Do not install the flammable things on surroundings
④	Do not use the PLC in the environment of direct vibration
⑤	Except expert service staff, do not disassemble or fix or modify the product
⑥	Use the PLC in an environment that meets the general specifications contained in this datasheet.
⑦	Be sure that external load does not exceed the rating of output module.
⑧	When disposing of PLC and battery, treat it as industrial waste.
⑨	I/O signal or communication line shall be wired at least 100mm away from a high-voltage cable or power line.

2 Operating Environment

To install, observe the below conditions.

No	Item	Specification	Standard			
1	Ambient temp.	0 ~ 55℃	-			
2	Storage temp.	-25 ~ 70℃	-			
3	Ambient humidity	5 ~ 95%RH, non-condensing	-			
4	Storage humidity	5 ~ 95%RH, non-condensing	-			
5	Vibration Resistance	Occasional vibration		10 times in each direction for X, Y, Z	IEC 61131-2	
		Frequency	Acceleration			
		5≤f<8.4Hz	-			3.5mm
		8.4≤f≤150Hz	9.8m/s ² (1g)			-
		Continuous vibration				
		Frequency	Frequency			Frequency
5≤f<8.4Hz	-	1.75mm				
8.4≤f≤150Hz	4.9m/s ² (0.5g)	-				

3 Applicable Support Software

For system configuration, the following version is necessary.

- XGI CPU : V4.05 or above
- XGK CPU : V4.5 or above
- XGR CPU : V2.6 or above
- XG5000 Software : V4.07 or above

4 Accessories and Cable Specifications

Check RS-232/485 Connector attached in the module. (XGL-CH2B/C42B)


When using RS-422 or RS-485 communication channel, twisted pair cable shall be used with consideration of communication distance and speed.

- Item : Low Capacitance LAN Interface Cable
- Type : LIREV-AMESB
- Size : 2P X 22AWG(D/0.254 TA)
- Manufacturer : LS Cable Co., Ltd
- Electrical characteristics

Items	Unit	Characteristics	Condition
Conductor Resistance	Ω/km	59 or less	25℃
Withstanding Voltage (DC)	V/1min	500V, 1Min.	In air
Insulation Resistance	MΩ-km	1,000 or more	25℃
Capacity	Pf/M	45 or less	1kHz
Characteristic Impedance	Ω	120±12	10MHz

5 Parts Name and Dimension (mm)

This is front part of the Module. Refer to each name when operating the system. For more information, refer to user's manual.

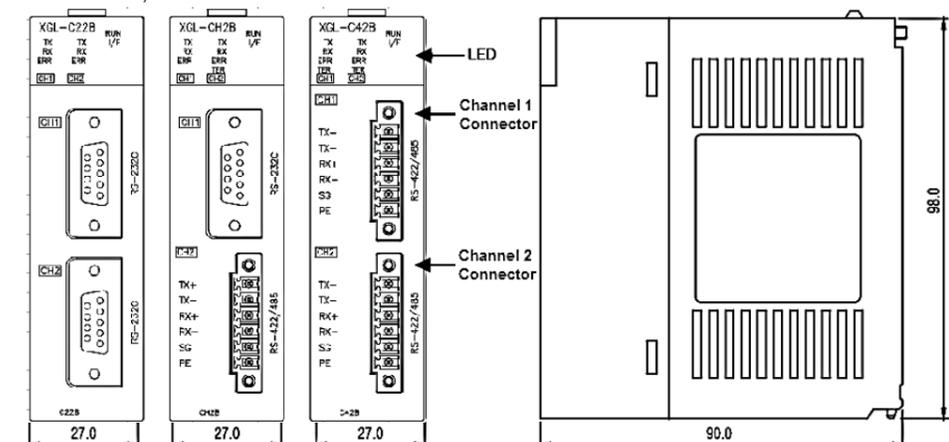

LED details

Name	Description	Status	LED Status Description
RUN	Cnet operation status	On	Normal operating
		Off	Abnormal operating of Cnet I/F Module
I/F	Interface status with CPU	On	Interface error with CPU module
		Off	Communication module initialization error
		Blinks	Normal operating
TX	During frame transmission	On	During frame transmission
		Off	Frame transmission completed
RX	During frame receiving	On	During frame receiving
		Off	Frame receiving completed
ERR	Displays frame Error	On	Frame Error
		Off	Normal frame
TER	Displays the terminal resistance setting (RS-422/485 port)	On	Activated (CH2B/C42B)
		Off	Deactivated (CH2B/C42B)

6 Installing / Removing Modules


Here describes the method to attach each module to the base or remove it.

1) Installing module

- Insert a fixed projection of the lower part of PLC into the module fixed hole of base
- Slide the upper part of module to fix to the base, and then fit it to the base by using the module fixed screw.
- Pull the upper part of module to check if it is installed to the base completely.

2) Removing module

- Loosen the fixed screws of the upper part of module from the base
- By pressing the hook, pull the upper part of module from the axis of the lower part of module
- By lifting the module upward, remove the loading lever of module from the fixing hole

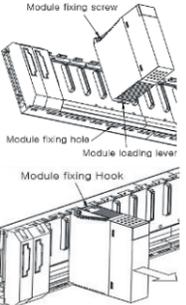

7 Wiring

Precaution for wiring

1) RS-232C connector (modem connection)

Cnet(9-PIN)		Signal Direction (Cnet ↔ external device)	Modem(25-PIN)	
Pin No	Name		Name	Pin No.
1	CD	←	CD	8
2	RXD	←	RXD	3
3	TXD	→	TXD	2
4	DTR	→	DTR	20
5	SG	→	SG	7
6	DSR	←	DSR	6
7	RTS	→	RTS	4
8	CTS	←	CTS	5

2) RS-422 Connector for communication

Cnet(5-Pin)		Signal Direction (Cnet ↔ external device)	External comm. Device
Pin No	Name		
1	TX+	→	RX+
2	TX-	→	RX-
3	RX+	←	TX+
4	RX-	←	TX-
5	SG	→	SG
6	PE	-----	PE

3) RS-485 Connector for communication

Cnet(5-Pin)		Signal Direction (Cnet ↔ external device)	External comm. Device
Pin No	Name		
1	TX+	→	RX+
2	TX-	→	RX-
3	RX+	←	TX+
4	RX-	←	TX-
5	SG	→	SG
6	PE	-----	PE

- PE connection is not necessary.
- For more information about wiring, refer to user manual.

8 Warranty

- The warranty period is 36 months from the date of manufacture.
- The initial diagnosis of faults should be conducted by the user. However, upon request, LS ELECTRIC or its representative(s) can undertake this task for a fee. If the cause of the fault is found to be the responsibility of LS ELECTRIC, this service will be free of charge.
- Exclusions from warranty
 - Replacement of consumable and life-limited parts (e.g. relays, fuses, capacitors, batteries, LCDs, etc.)
 - Failures or damages caused by improper conditions or handling outside those specified in the user manual
 - Failures caused by external factors unrelated to the product
 - Failures caused by modifications without LS ELECTRIC's consent
 - Use of the product in unintended ways
 - Failures that cannot be predicted/solved by current scientific technology at the time of manufacture
 - Failures due to external factors such as fire, abnormal voltage, or natural disasters
 - Other cases for which LS ELECTRIC is not responsible
- For detailed warranty information, please refer to the user's manual.

The content of the installation guide is subject to change without notice for product performance improvement.

LS ELECTRIC Co., Ltd. www.ls-electric.com 1031000495 V4.5 (2024.6)

E-mail: automation@ls-electric.com



- Headquarter/Seoul Office
 - LS ELECTRIC Shanghai Office (China)
 - LS ELECTRIC (Wuxi) Co., Ltd. (Wuxi, China)
 - LS-ELECTRIC Vietnam Co., Ltd. (Hanoi, Vietnam)
 - LS ELECTRIC Middle East FZE (Dubai, U.A.E.)
 - LS ELECTRIC Europe B.V. (Hoofddorf, Netherlands)
 - LS ELECTRIC Japan Co., Ltd. (Tokyo, Japan)
 - LS ELECTRIC America Inc. (Chicago, USA)
 - Factory: 56, Samseong 4-gil, Mokcheon-eup, Dongnam-gu, Cheonan-si, Chungcheongnam-do, 31226, Korea
- Tel: 82-2-2034-4033,4888,4703
 Tel: 86-21-5237-9977
 Tel: 86-510-6851-6666
 Tel: 84-93-631-4099
 Tel: 971-4-886-5360
 Tel: 31-20-654-1424
 Tel: 81-3-6268-8241
 Tel: 1-800-891-2941